


name	light meter		
model	DT-8808		
procedure	standard calibration		

**drawing**

**operation**

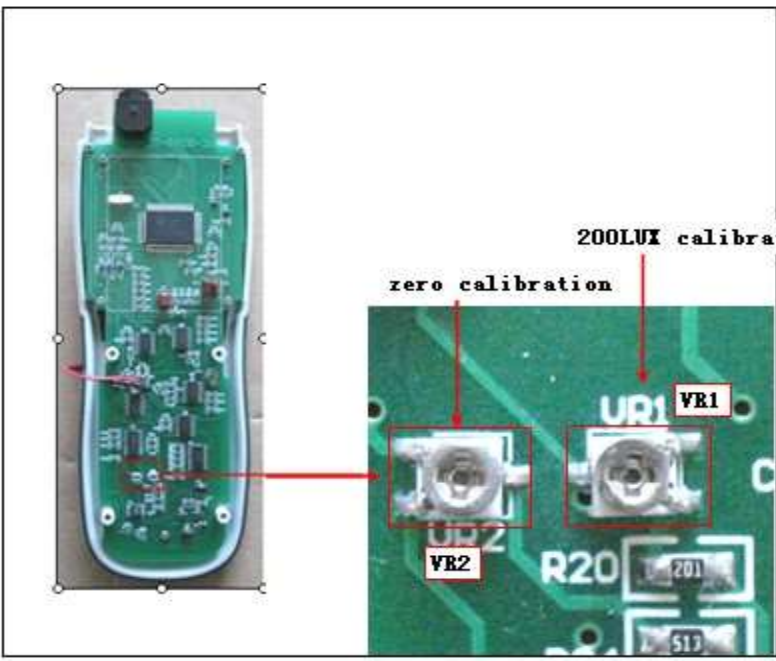

**picture 10**

**1. adjust LUX zero standard:**  
 press LUX button once, switch to LUX, adjust (picture 10), make 40~400kLUX to display:0000~0001.

**14、 200LUX calibration:**

① output the illumination intensity by standard testing jig, remove optical bench, till the LCD

② open the photoreceptor cover, put the press LUX button once, switch on LUX, adjust the potentiometer VR1 of PCB, make the display same as standard, allowed error:±2d; ( picture 10)